



Clorox® Total 360® System

Protocols for Open Spaces



1. Prepare operator, area, device and surfaces

- Secure equipment and consider removing paper products from the area to be treated.
- Ensure that individuals without PPE are not present in the area to be treated.
- Don the appropriate PPE. Refer to SDS for specific PPE requirements.
- If needed, remove gross soil from surfaces using your facility's recommended protocols.
- Place signs or warning indicators outside the treatment area to indicate that cleaning is in progress.
- Prepare the Clorox® Total 360® Electrostatic Sprayer for use per manufacturer instructions.


2. Spray

- Standing with the sprayer nozzle approximately 2-4 feet away from surfaces, spray individual surfaces and objects, working from high to low areas using a slow, side to side motion until surfaces are covered with disinfectant.
- When using Clorox® Total 360® Disinfectant Cleaner, spray surfaces to ensure visible wetness for the desired contact time¹.
- Wiping is not required to ensure surface disinfection; however, you may choose to wipe specific surfaces to polish them (e.g., glass, mirrors) or to remove visible residue after the contact time is achieved.

3. Finish preparing the area

- Remove any signs or warning indicators from the area.
- Bystanders can immediately enter the area after treatment is complete.

1. Spray time may vary based on humidity and temperature levels

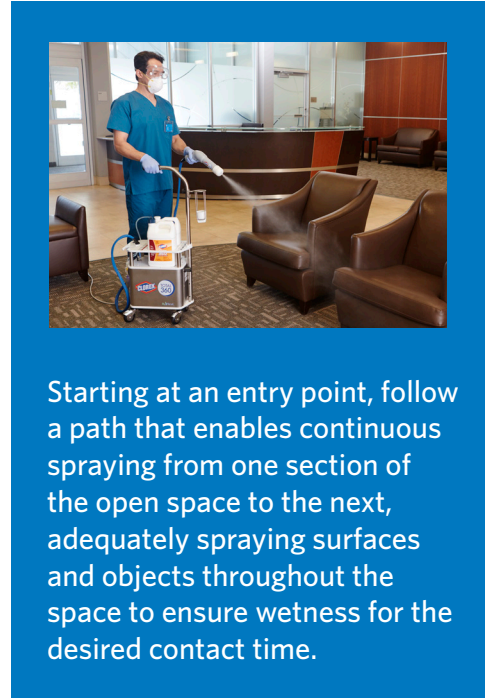

Starting at an entry point, follow a path that enables continuous spraying from one section of the open space to the next, adequately spraying surfaces and objects throughout the space to ensure wetness for the desired contact time.

Clorox Healthcare® provides a wide range of disinfecting wipes when pre-cleaning is required.



For more information, contact your Clorox sales representative or visit us at www.CloroxTotal360.com

© 2018 Clorox Professional Products Company, 1221 Broadway, Oakland, CA 94612

NI-44275

